

Spray Vaccinator



- **For all types of chick boxes**
- **Adjustable doses**
- **Minimized waste of vaccine**
- **Safe and easy operation – no electric connections**

Handling quality chicks demands skill, experience, dedication, and a little support from LINCO!

Technical description

- **For all types of boxes**
The automatic spray-vaccinator is placed over the chick box conveyor after the chick counter. The height and the spraying angle is adjusted to suit the specific box type.
- **Easy operation**
Vaccine is added in top of the tank, and is easily removed by means of a ball valve in the bottom of the tank. The vaccine is sprayed by means of compressed air, and the pressure to the valves is adjusted by means of the pressure regulator on the side of the tank.
- **Adjustable doses**
The vaccinator is supplied with standard nozzle type HB 1/8VV-65067. The standard nozzle gives from 0.18 to 0.3 litre/min. Other capacities are available on demand.
- **Minimized waste of vaccine**
The nozzles are installed direct on the valves to minimize drops.
- **Safe operation – no electric connections**
The vaccinator is controlled by a pneumatic sensor and timer. The dosage is regulated by adjusting the pressure on the regulator and the time on the timer (or another size of nozzle). The vaccinator has no electric components and is therefore very easy to clean.



Technical specifications

Type of nozzle: HB 1/8VV-65067
Capacity of tank: 21 litre
Measurements: 600x800x1000 (LxWxH)
Weight: 40 kg (without vaccine)

LINCO Set & Hatch A/S
Kristiansgade 12
DK-7430 Ikast
Tel.: +45 96 60 15 00
Fax: +45 96 60 15 01
E-mail: linco@set-hatch.com
www.set-hatch.com

